24

22

2 20

EL DIAL ASSY (12)
941-471150

LCD ASSY (14)

26

LAMP EL (16)

Connector (EL)

PLATE HOLDING

WHEEL-MINUTE

WHEEL-CENTER

WHEEL-HOUR

WHEEL-SETTING

CONNECTOR-EL

FRAME (10)

FIG 1

CLAMP-BATTERY (51)

CLIP BATTERY (51)

SPACER-SUPPORT

PCB-ASSY (40)

SPRING-PUSH BUTTON (Vdd) (34)

(34)
SPRING-CONTACT (Vss)

INSULATOR (32)

PCB-ASSY (30)

BRIDGE (28)

SPRING-GROUNDING

WHEEL INTERMEDIATE (26)

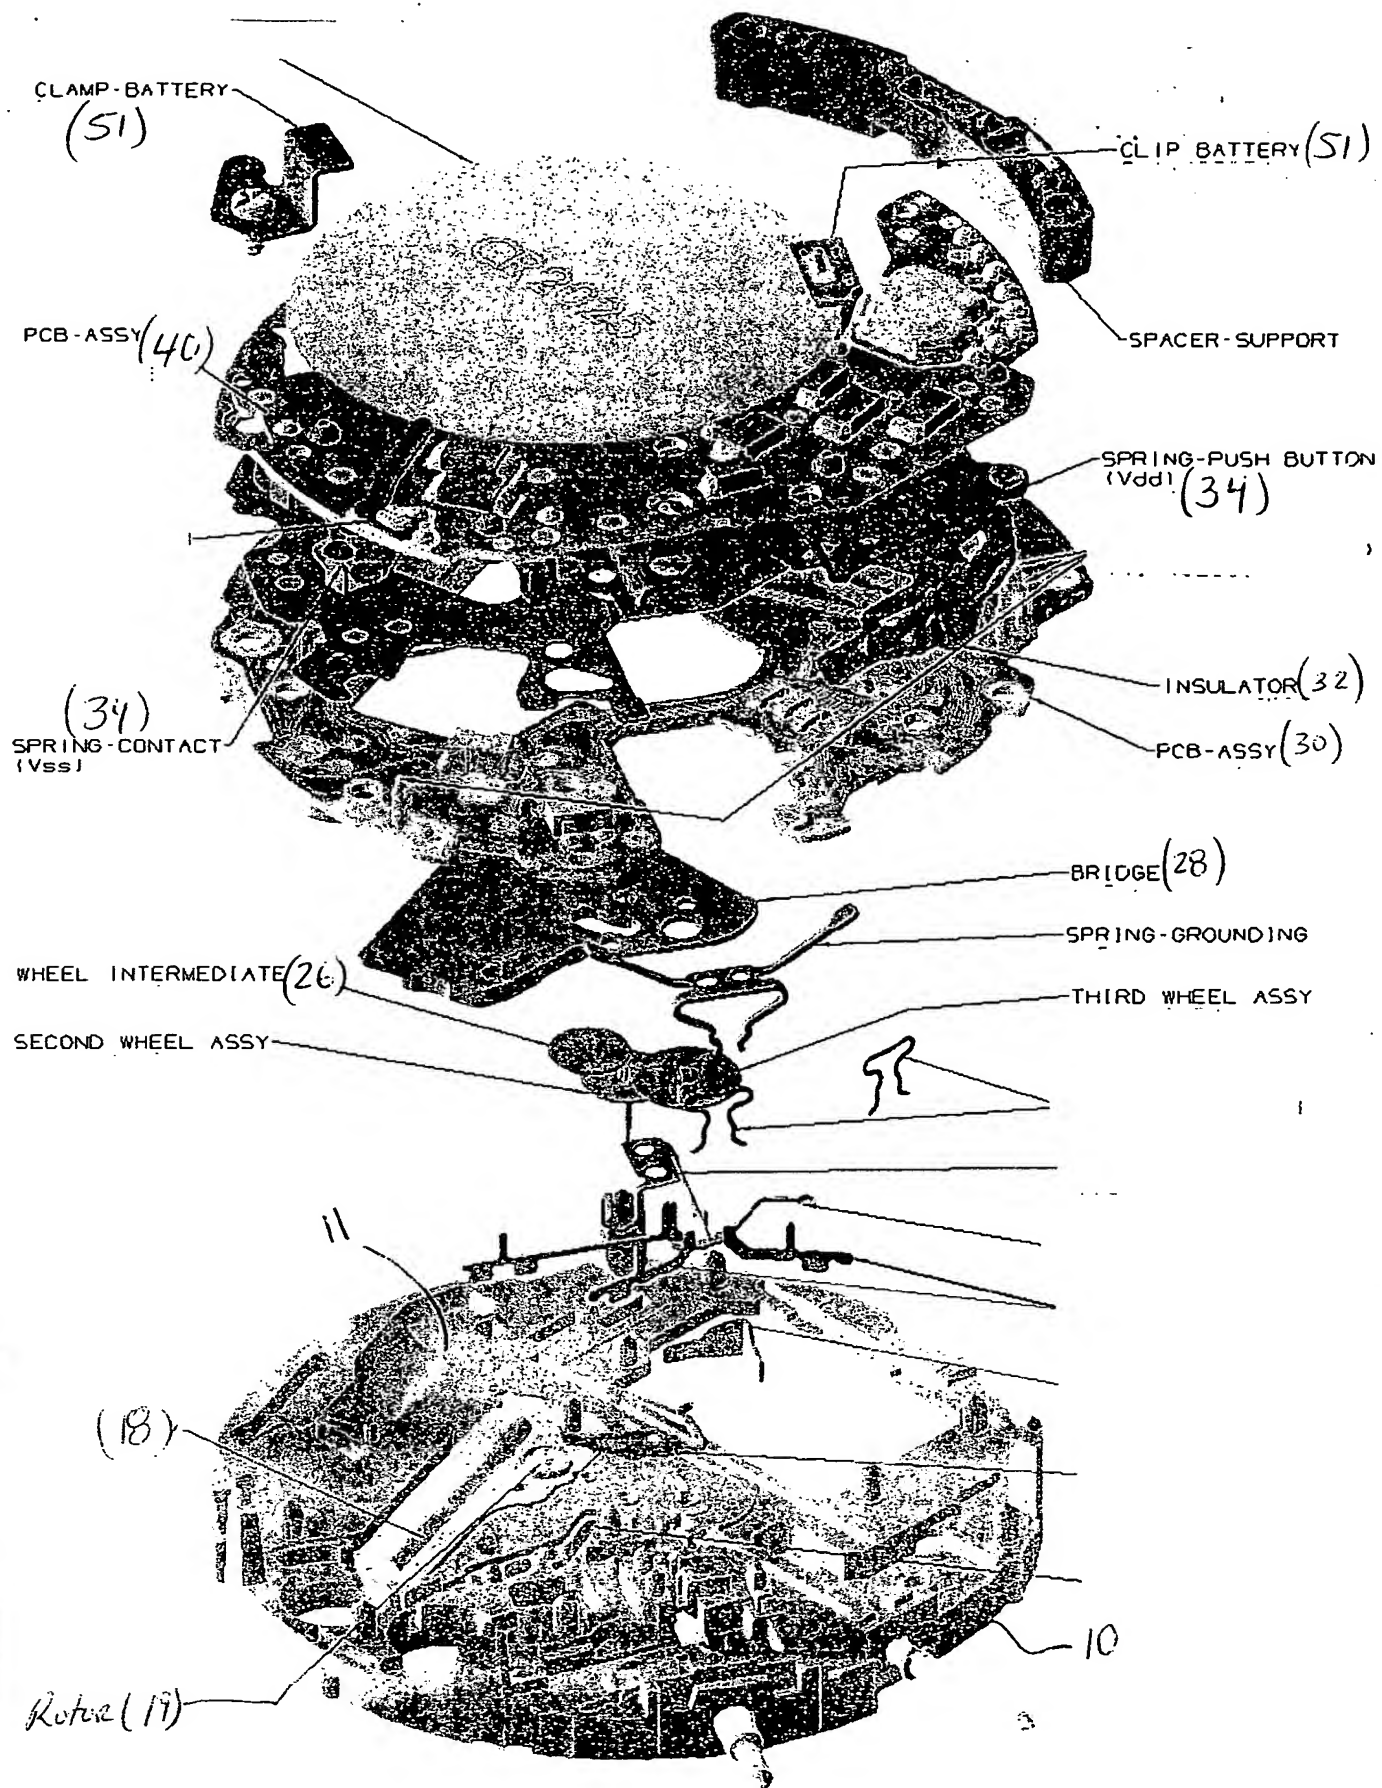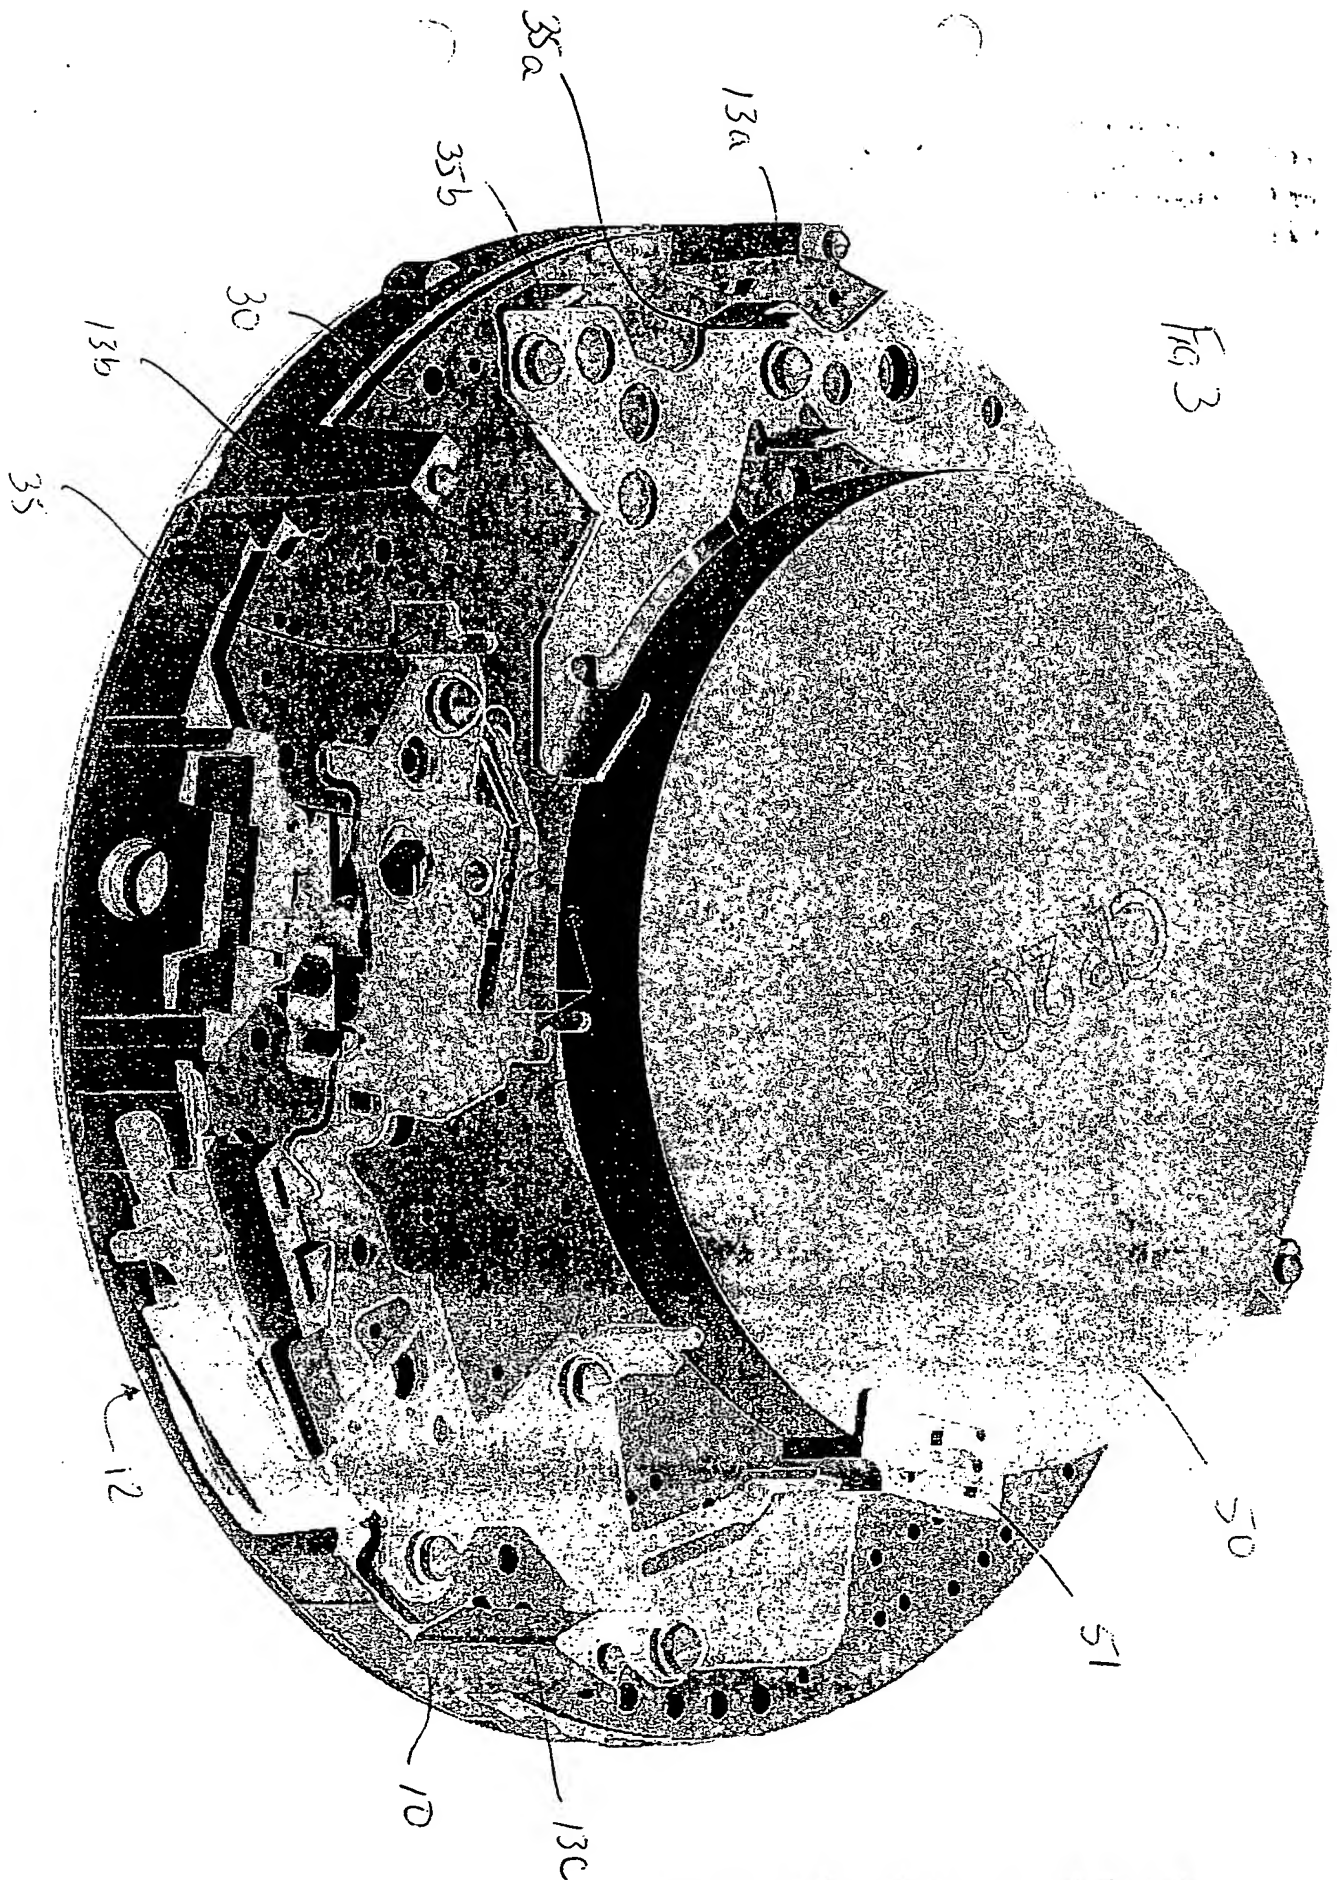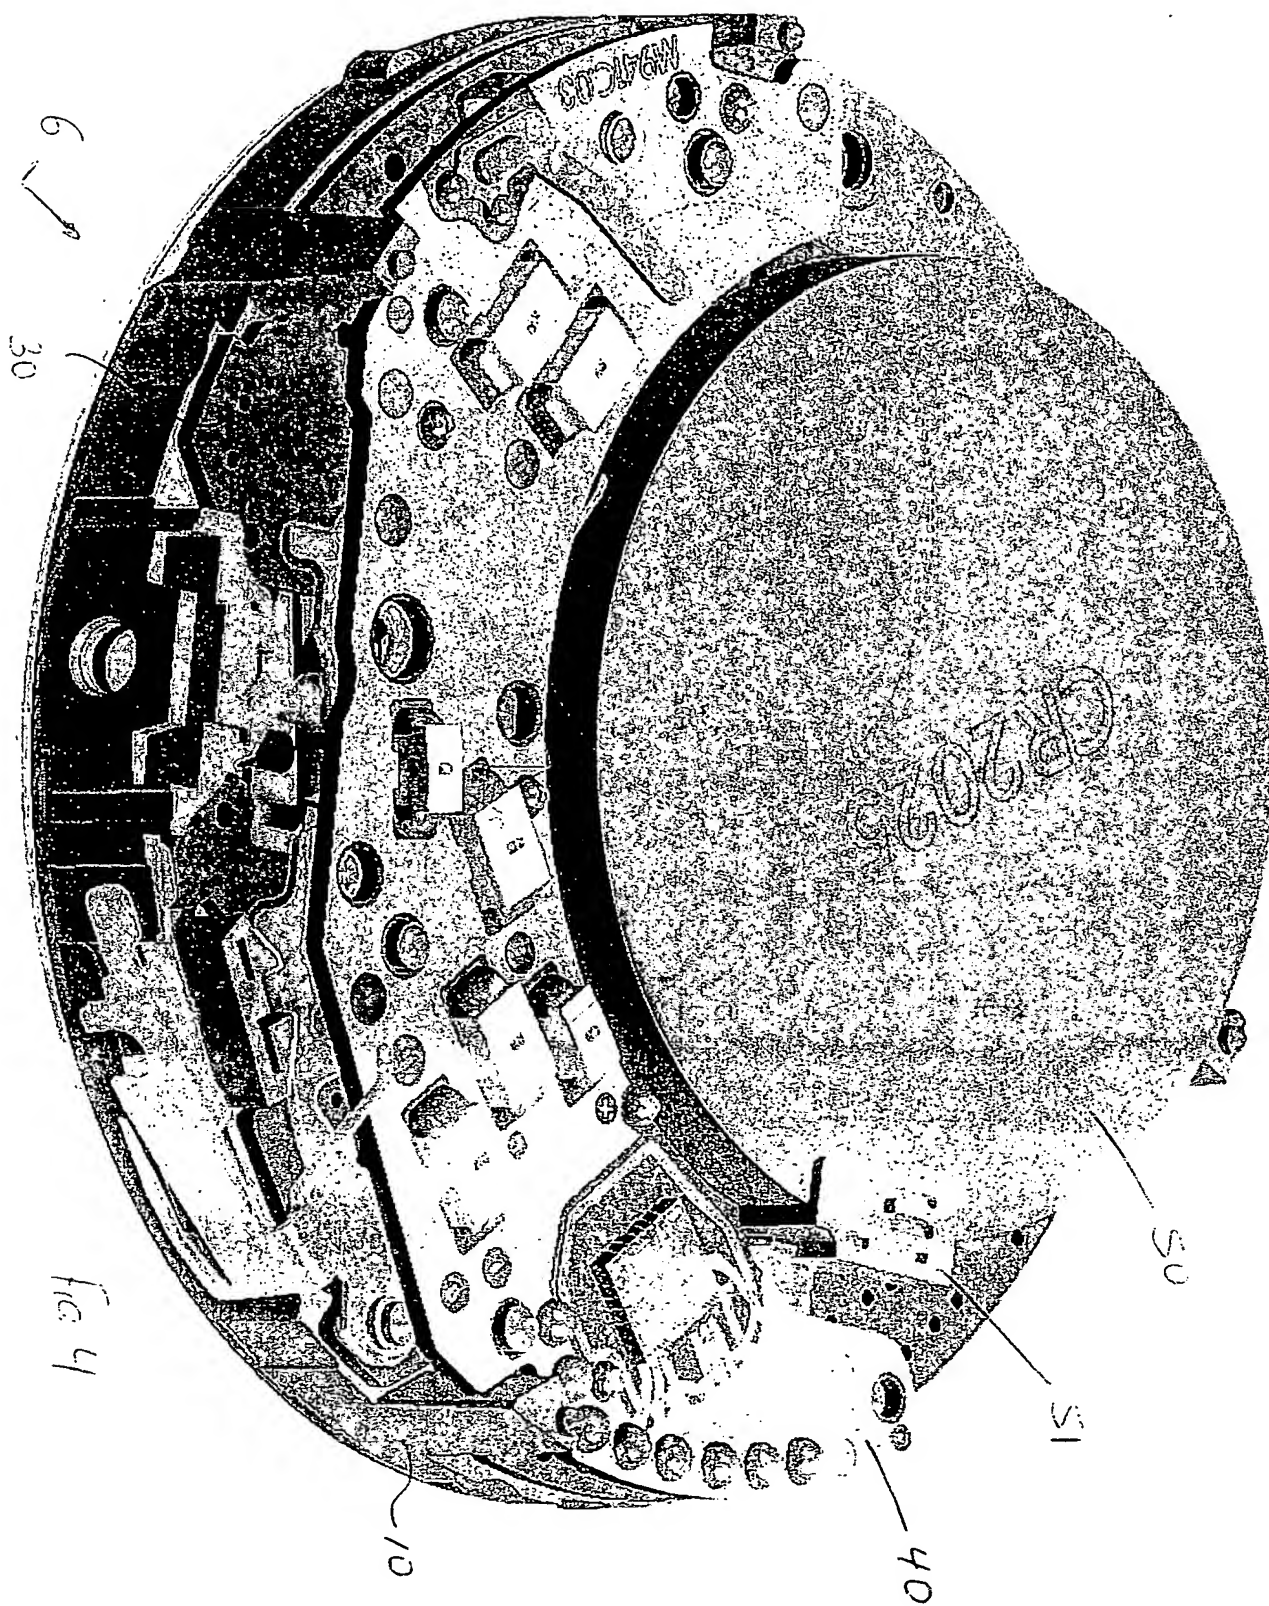THIRD WHEEL ASSY
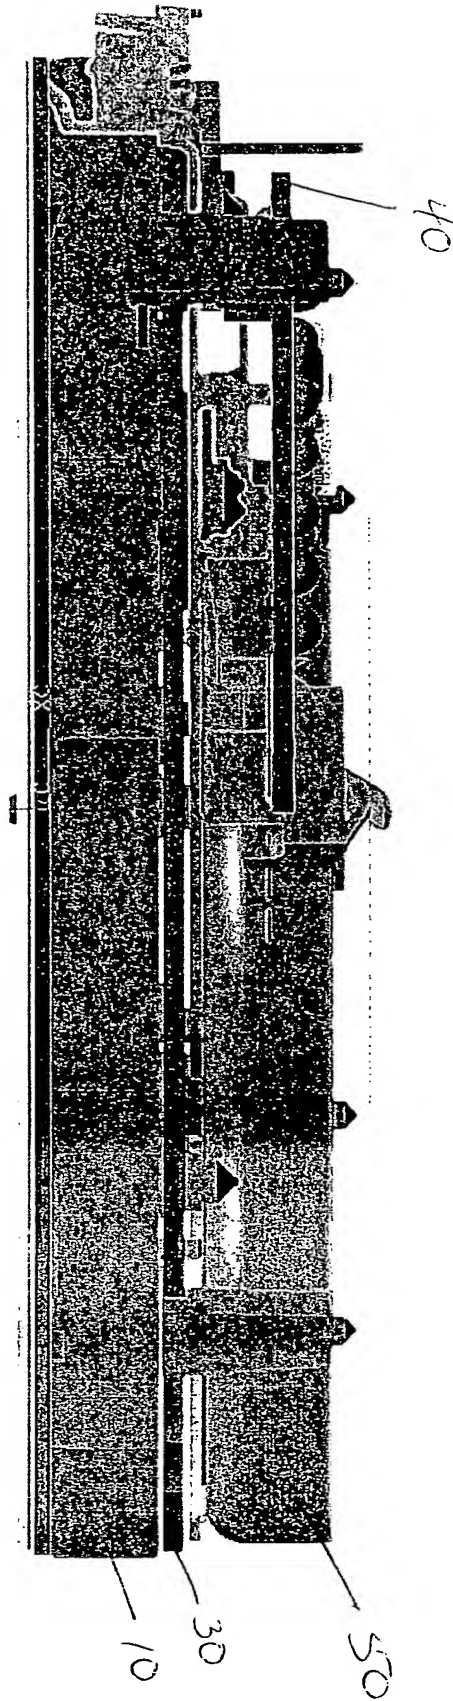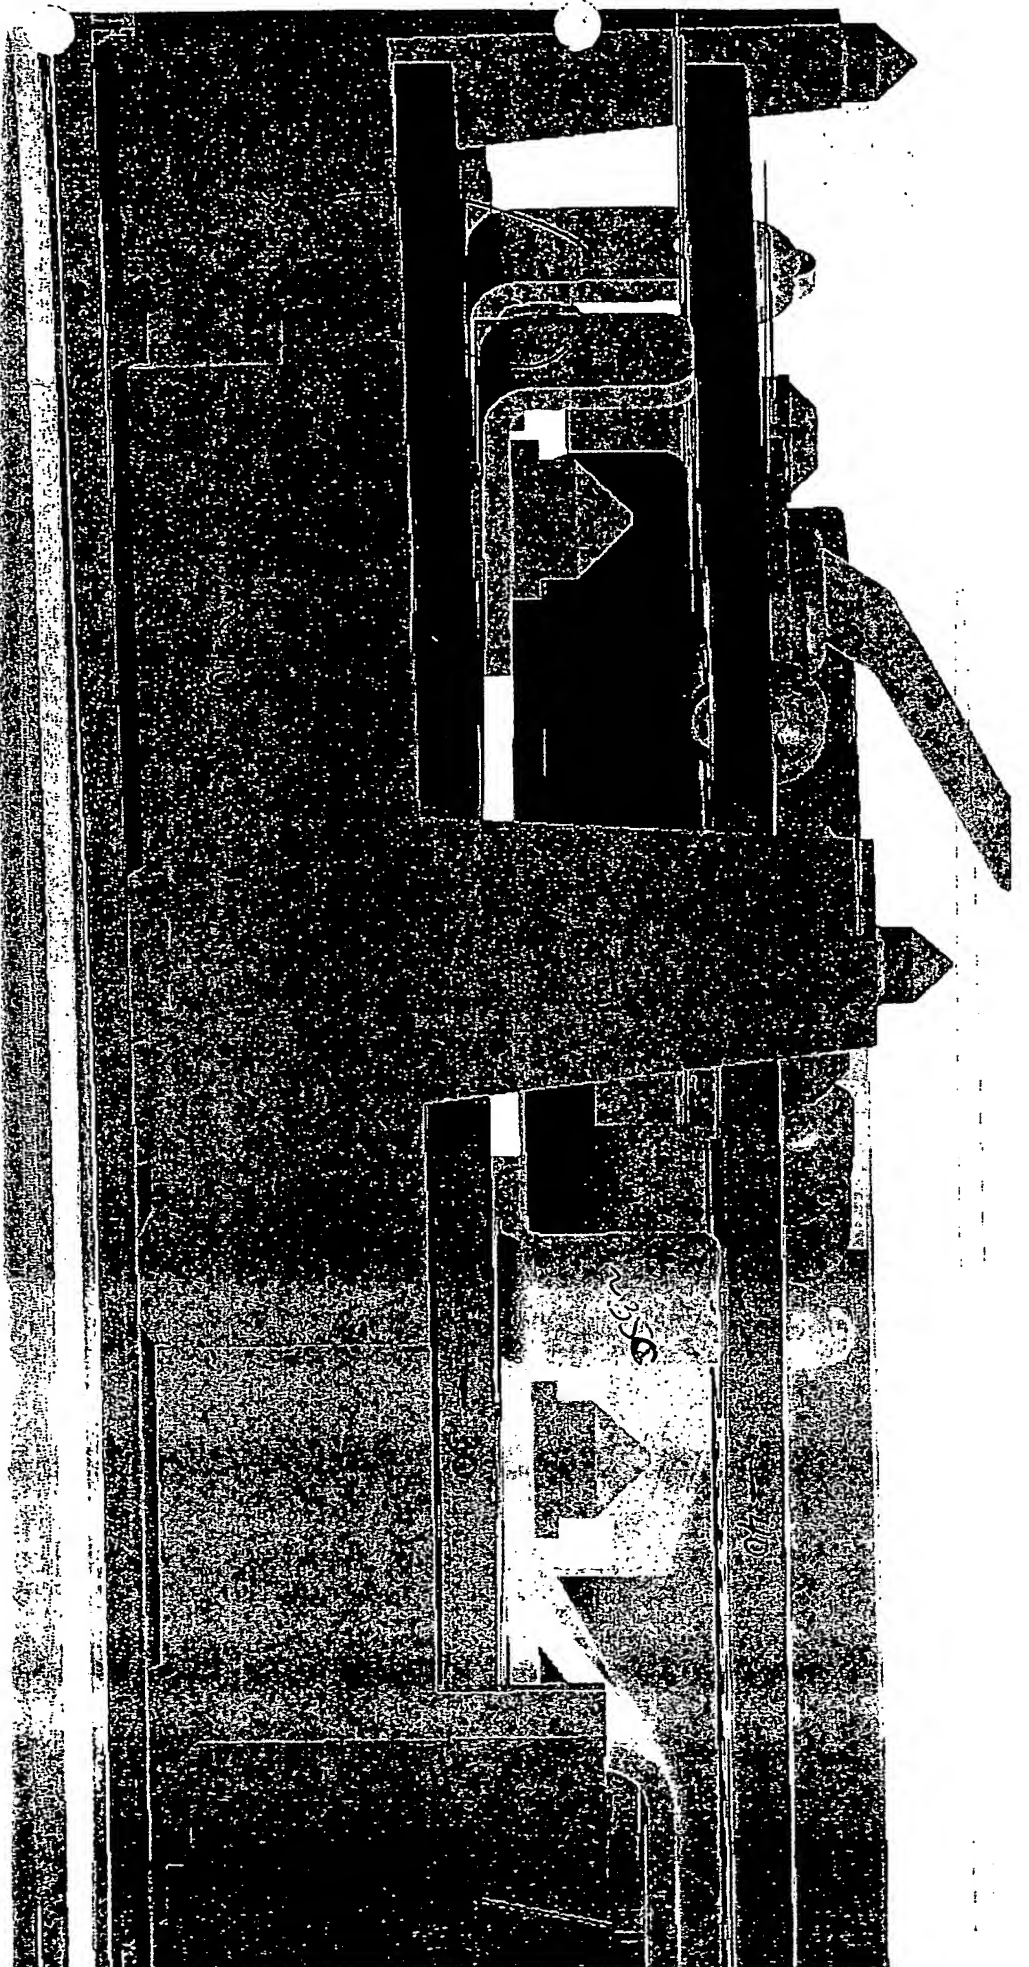
SECOND WHEEL ASSY

11

(18)

10

Rotor (19)

FIG 2   BEST AVAILABLE COPY

FIG. 3

BEST AVAILABLE COPY

FIG 4

FIG 5

Fig 6

FIG. 7